

DRIVER/SOL. NO.	Q15/1	Q17/2	Q19/3	Q21/4	Q23/5	Q25/6	Q27/7	Q29/8	Q31/9	Q33/10	Q35/11	Q37/12	Q39/13	Q41/14	Q43/15	Q45/16	Q2/17*	Q4/18*	Q6/19	Q8/20	Q10/21	Q12/22
DRIVER BOARD CONN.	2J11-4	2J11-5	2J11-7	2J11-8	2J11-9	2J11-3	2J11-2	2J11-1	2J9-9	2J9-7	2J9-1	2J9-2	2J9-3	2J9-4	2J9-5	2J9-6	2J12-7	2J12-4	2J12-3	2J12-6	2J12-8	2J12-9
WIRE COLOR	GRY-BRN	GRY-RED	GRY-ORN	GRY-YEL	GRY-GRN	GRY-BLU	GRY-VIO	GRY-BLK	BRN-BLK	BRN-RED	BRN-ORN	BRN-YEL	BRN-GRN	BRN-BLU	BRN-VIO	BRN-GRY	BLU-BRN	BLU-RED	BLU-ORN	BLU-YEL	BLU-GRN	BLU-BLK
HOT TIP	TOP EJECT	TIP RESET	HOT RESET	LEFT EJECT	BALL RELEASE	NOT USED	NOT USED	NOT USED	10 POINT CHIME	100 POINT CHIME	1000 POINT CHIME	10,000 POINT CHIME	NOISE DRUM	CREDIT KNOCKER	BUZZER	COIN LOCKOUT	RIGHT KICKER	JET BUMPER	LEFT KICKER	NOT USED	NOT USED	NOT USED
LUCKY-7	LEFT REEL	CENTER REEL	RIGHT REEL	LEFT TARGET RESET	RIGHT TARGET RESET	BALL RELEASE	NOT USED	NOT USED	10 POINT CHIME	100 POINT CHIME	1000 POINT CHIME	10,000 POINT CHIME	NOISE DRUM	CREDIT KNOCKER	BUZZER	COIN LOCKOUT	LEFT JET BUMPER	RIGHT JET BUMPER	RIGHT KICKER	LEFT KICKER	NOT USED	NOT USED
WORLD CUP PROTOTYPE	LEFT EJECT	RIGHT EJECT	LEFT SHOOTER	RIGHT SHOOTER	BALL RELEASE	NOT USED	BELL	NOT USED	10 POINT CHIME	100 POINT CHIME	1000 POINT CHIME	10,000 POINT CHIME	NOT USED	CREDIT KNOCKER	NOT USED	COIN LOCKOUT	RIGHT JET BUMPER	LEFT JET BUMPER	NOT USED	NOT USED	NOT USED	NOT USED
WORLD CUP PRODUCTION	LEFT EJECT	RIGHT EJECT	LEFT SHOOTER	RIGHT SHOOTER	BALL RELEASE	NOT USED	BELL SOUND	NOT USED	10 POINT SOUND	100 POINT SOUND	1000 POINT SOUND	10,000 POINT SOUND	SOUND ALTERNATOR	CREDIT KNOCKER	TILT SOUND	COIN LOCKOUT	RIGHT JET BUMPER	LEFT JET BUMPER	NOT USED	NOT USED	NOT USED	NOT USED
DISCO FEVER	BALL RELEASE	"F-E-V" RESET	"E-R" RESET	NOT USED	*SOUND ALTERNATOR	NOT USED	NOT USED	NOT USED	10 POINT SOUND	100 POINT SOUND	1000 POINT SOUND	10,000 POINT SOUND	*SOUND ALTERNATOR	CREDIT KNOCKER	TILT SOUND	COIN LOCKOUT	LEFT JET BUMPER	RIGHT JET BUMPER	LEFT KICKER	RIGHT KICKER	NOT USED	NOT USED
CONTACT	BALL RELEASE	TOP EJECT	LEFT RESET	RIGHT RESET	LEFT EJECT	LEFT THROWER	RIGHT THROWER	UP POST	10 POINT SOUND	100 POINT SOUND	1000 POINT SOUND	10,000 POINT SOUND	SOUND ALTERNATOR	CREDIT KNOCKER	DOWN POST	COIN LOCKOUT	CENTER JET BUMPER	LEFT JET BUMPER	RIGHT JET BUMPER	NOT USED	NOT USED	MOVING TARGET RELAY
PHOENIX	BALL RELEASE	LEFT CENTER RESET	LEFT BANK BOTTOM RESET	LEFT BANK TOP RESET	R. BANK TOP RESET	R. BANK BOTTOM RESET	RIGHT CENTER RESET	NOT USED	10 POINT SOUND	100 POINT SOUND	1000 POINT SOUND	10,000 POINT SOUND	SOUND ALTERNATOR	CREDIT KNOCKER	NOT USED	COIN LOCKOUT	LEFT JET BUMPER	CENTER JET BUMPER	RIGHT JET BUMPER	LEFT KICKER	RIGHT KICKER	NOT USED
POKERINO	BALL RELEASE	JOKER RESET	LEFT JACK RESET	RIGHT JACK RESET	TOP QUEEN RESET	BOTTOM QUEEN RESET	DOWN PIN	UP PIN	10 POINT SOUND	100 POINT SOUND	1000 POINT SOUND	10,000 POINT SOUND	SOUND ALTERNATOR	CREDIT KNOCKER	NOT USED	COIN LOCKOUT	TOP JET BUMPER	LEFT JET BUMPER	BOTTOM JET BUMPER	LEFT KICKER	NOT USED	RIGHT KICKER
FLASH	BALL RELEASE	5 BANK TOP RESET	5 BANK BOTTOM RESET	3 BANK RESET	EJECT HOLE	FLASH LIGHTS	NOT USED	NOT USED	SOUND	SOUND	SOUND	SOUND	SOUND	CREDIT KNOCKER	NOT USED	COIN LOCKOUT	LEFT* JET BUMPER	RIGHT* JET BUMPER	BOTTOM JET BUMPER	RIGHT KICKER	LEFT KICKER	NOT USED
STELLAR WARS	BALL RELEASE	LEFT 3 BANK RESET	EJECT	4 BANK LEFT RESET	4 BANK RIGHT RESET	RIGHT 3 BANK RESET	BOTTOM R. JET BUMPER	FLASH LAMPS	SOUND	SOUND	SOUND	SOUND	SOUND	CREDIT KNOCKER	NOT USED	COIN LOCKOUT	LEFT* KICKER	BOTTOM* JET BUMPER	TOP LEFT JET BUMPER	TOP RIGHT JET BUMPER	TOP CENTER JET BUMPER	RIGHT KICKER
TRI-ZONE	BALL RELEASE	EJECT HOLE	"Z" RESET	"O" RESET	"N" RESET	"E" RESET	NOT USED	NOT USED	SOUND	SOUND	SOUND	SOUND	SOUND	CREDIT KNOCKER	NOT USED	COIN LOCKOUT	TOP* JET BUMPER	LEFT* JET BUMPER	BOTTOM JET BUMPER	LEFT KICKER	RIGHT KICKER	NOT USED
TIME WARP	BALL RELEASE	TOP EJECT	SIDE EJECT	3 BANK RESET	5 BANK TOP RESET	5 BANK BOTTOM RESET	RIGHT KICKER	LEFT KICKER	SOUND	SOUND	SOUND	SOUND	SOUND	CREDIT KNOCKER	NOT USED	COIN LOCKOUT	TOP LEFT JET BUMPER	CENTER LEFT JET BUMPER	BOTTOM LEFT JET BUMPER	CENTER RIGHT JET BUMPER	RIGHT JET BUMPER	NOT USED
LASER BALL	BALL RELEASE	LEFT SHOOTER	"L-A" RESET	"S-E-R" RESET	EJECT	"B-A" RESET	"L-L" RESET	RIGHT SHOOTER	SOUND	SOUND	SOUND	SOUND	SOUND	CREDIT KNOCKER	LASER LAMPS	COIN LOCKOUT	LEFT JET BUMPER	CENTER JET BUMPER	RIGHT JET BUMPER	RIGHT KICKER	NOT USED	LEFT KICKER
GORGAR	BALL RELEASE	EJECT HOLE	"G-A-R" RESET	"G-O-R" RESET	MAGNET RELAY	MAGNET LAMPS	NOT USED	NOT USED	SOUND	SOUND	SOUND	SOUND	SOUND	CREDIT KNOCKER	NOT USED	COIN LOCKOUT	TOP JET BUMPER	LEFT JET BUMPER	BOTTOM JET BUMPER	LEFT KICKER	RIGHT KICKER	NOT USED
FIREPOWER	BALL RELEASE	NOT USED	NOT USED	LEFT EJECT	RIGHT EJECT	UPPER RIGHT EJECT	LEFT BALL SAVER	BALL RAMP	SOUND	SOUND	SOUND	SOUND	SOUND	CREDIT KNOCKER	FLASH LAMPS	COIN LOCKOUT	TOP LEFT JET BUMPER	BOTTOM LEFT JET BUMPER	TOP RIGHT JET BUMPER	BOTTOM RIGHT JET BUMPER	RIGHT KICKER	LEFT KICKER
TOPAZ SHUFFLE	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7	PIN 8	PIN 9	PIN 10	PIN RESET	NOISE DRUM	LOWEST POINT CHIME	2ND CHIME	3RD CHIME	4TH CHIME	COIN LOCKOUT	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED
SHUFFLES'S/W SOLID STATE SOUND	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7	PIN 8	PIN 9	PIN 10	PIN RESET	NOT USED	SOUND	SOUND	SOUND	SOUND	COIN LOCKOUT	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED

*NOTES: 1. DISCO FEVER PROTOTYPE SOUND ALTERNATOR WAS SOL. 13; PRODUCTION WAS SOL. 05. 2. ON STELLAR WARS, TRI-ZONE PROTOTYPE, AND MOST FLASH GAMES SOLENOIDS 17 AND 18 ARE REVERSED IN DIAGNOSTICS.